

CAADEx

SOLUTIONS OF HONEY

www.caadexproducts.com

ASSEMBLY INSTRUCTIONS FOR CAMB CAADEx TIPPING STAND.


PARTS:



1 pc Side panel Right side



1 pc Side panel left side

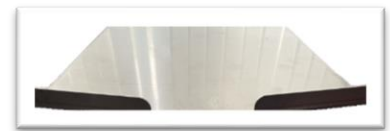

1 pc. Middle tray

1.  2 pcs M8 self-locking nuts, grade 5.6
2.  2 pcs M8 x 25 hex head screws, grade 5.6, for hand screws
3.  2 pcs M8 x 20 D head flanged screw 7380 A2 5.6 quality
4.  8 pcs M8 washers DIN 125 (for pivot point)
5.  2 M8 flat washers DIN 9021 (for cap screws)
6.  2 x M8 plastic screw caps D40

CAADEx Kft. Szekszárd Engineering and Sales Office
HU-7100 Szekszárd, Tartsay Vilmos utca 20.

E-mail: caadexhoney@caadex.hu
Mob: 0036/30 733-9272


E-mail: caadexhoney@caadex.hu
Mob: 0036/30 575-7050

Assembly:

Remove the foil from the side panels and the center tray.

Insert the screws and washers into the appropriate holes as shown in the assembly diagrams.

Tighten the self-locking nuts at the pivot point so that the upper panel of the tilting extension can still move when lifting.

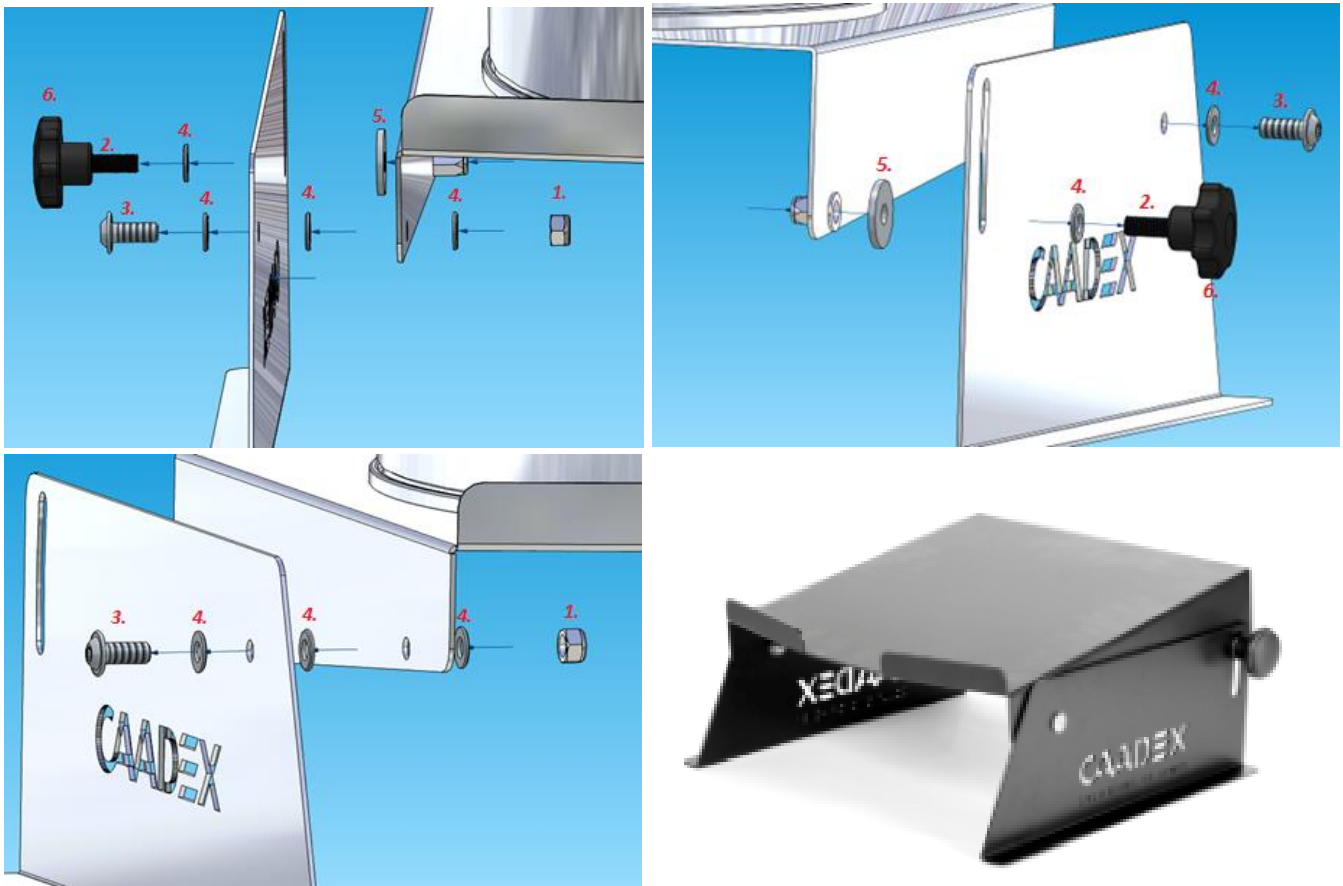**Adjusting the tilt angle:**

Loosen the black knurled screws on both sides.

Raise the rear of the tipper to the desired height.

Tighten the knurled screws on both sides.

Place the discharge container on top.

The maximum load capacity of the CAADEx tilt-up riser is 55 kg.

Best regards, The CAADEx team

CAADEx Kft. Szekszárd Engineering and Sales Office

HU-7100 Szekszárd, Tartsay Vilmos utca 20.